
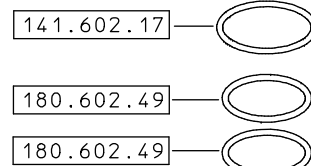




180.1910.14 180.1910.14KU 180.1910.14RO 180.1910.14SS

VARIANTI STANDARD / KU / SS
STANDARD / KU / SS MODELS

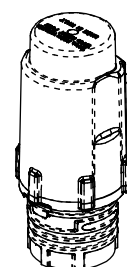


180.620.7
6.5/270° 6s GIALLO/YELLOW

VARIANTE RO
RO MODEL

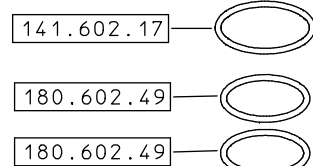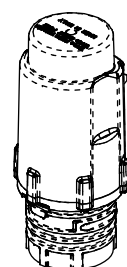

180.620.46
4.0/270° 9.5s ROSSO/RED

VARIANTI STANDARD / RO
STANDARD / RO MODELS

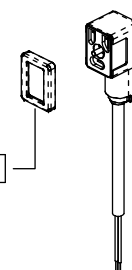

180.601.2

180.232.5

VARIANTE KU
KU MODEL

SENZA CONNETTORE
WITHOUT CONNECTOR


VARIANTE SS
SS MODEL



180.601.2


180.232.18

SMART SPRAY

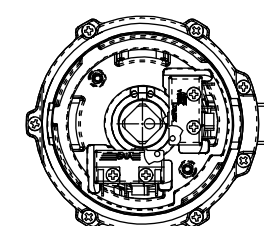

POSIZIONE DI PARTENZA 180.620.7 / 180.620.46
180.620.7 / 180.620.46 STARTING POSITION

RIFERIMENTO / NOTCH
180.1304.55

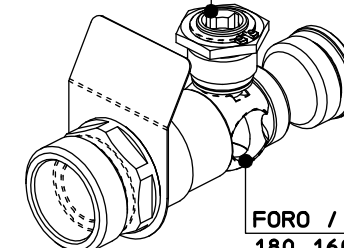


FORO / HOLE
180.1604.17

POSIZIONE DI ASSEMBLAGGIO 180.1604.17
E 180.1304.55 NEL 180.107.80 - SCALA 1:1
180.1604.17 AND 180.1304.55 ASSEMBLING
POSITION INSIDE 180.107.80 - SCALE 1:1

180.507.13



RIFERIMENTO / NOTCH
180.1304.55

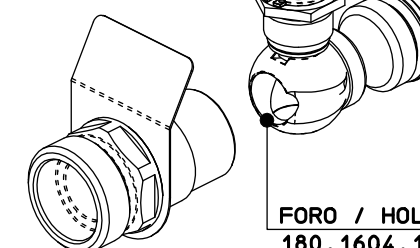

FORO / HOLE
180.1604.17


POSIZIONE DI PARTENZA 180.1604.17 E 180.1304.55
PER MONTAGGIO 180.620.7 E 180.620.46 - SCALA 1:1

180.1604.17 AND 180.1304.55 STARTING POSITION
FOR 180.620.7 AND 180.620.46 ASSEMBLING - SCALE 1:1

Per innestare 180.620.7 o 180.620.46 ruotare
180.1304.55 5°/10° dalla posizione di partenza
nel verso indicato dalla freccia

To engage 180.620.7 or 180.620.46 rotate 180.1304.55
from starting position 5°/10° in the arrow direction

SOLO PER KIT
FOR KIT ONLY


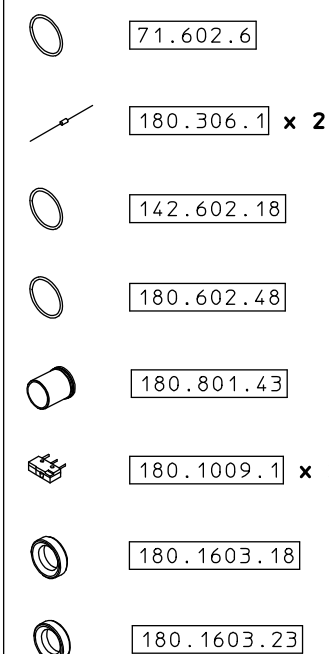


COME SI ORDINA / HOW TO ORDER

Kit ricambio
Spare parts kit **180.302.32.**

Assemblare 180.1617.6 con
SELON 628
Coppia di serraggio 15 Nm

180.1617.6

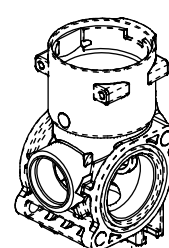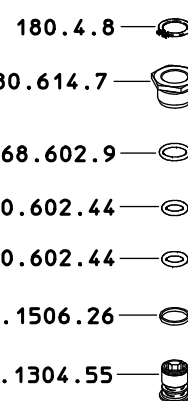

180.218.153



180.602.30

180.1702.32

180.1709.1
MARCATURA LASER

180.1604.17

180.1603.21

180.801.41

180.1603.25

180.1504.35
LOXEAL 56-03

180.107.80