

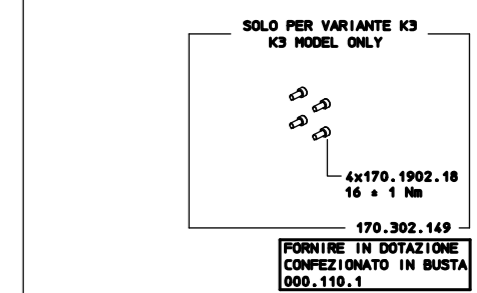
 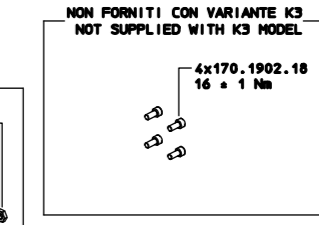
 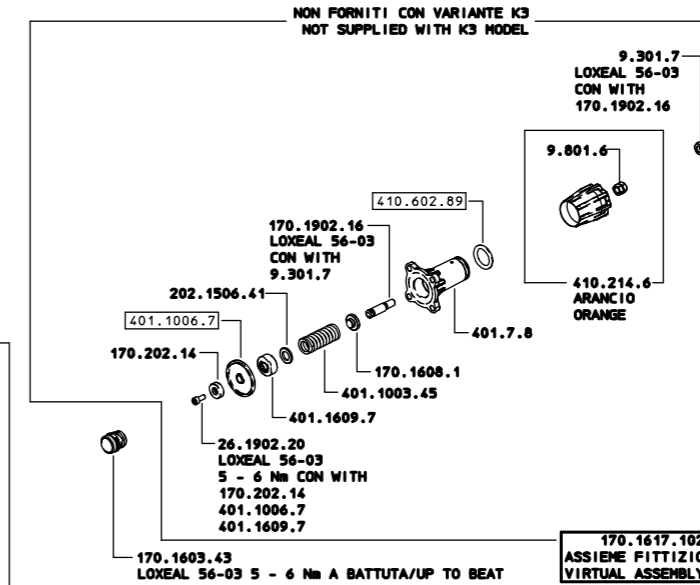
 
 
 
 
 
 
 
 
 
 


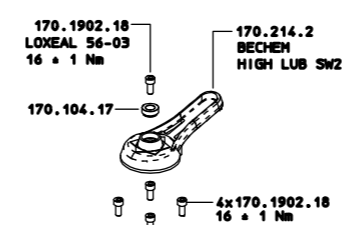
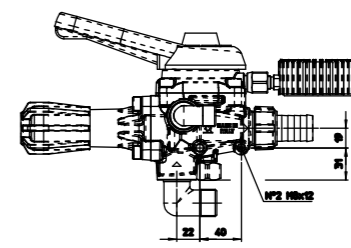
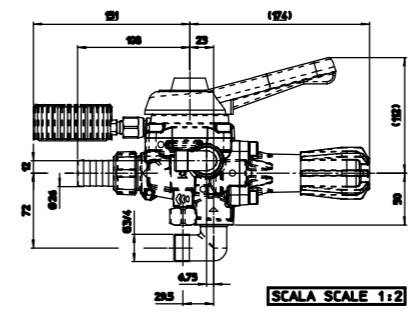
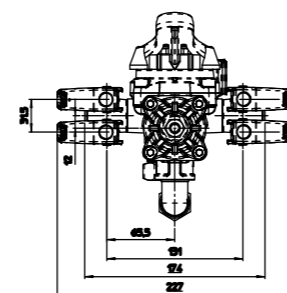
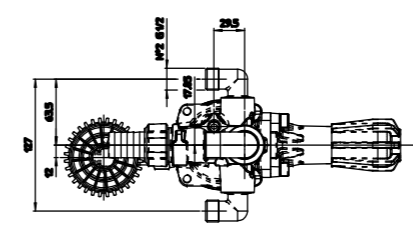
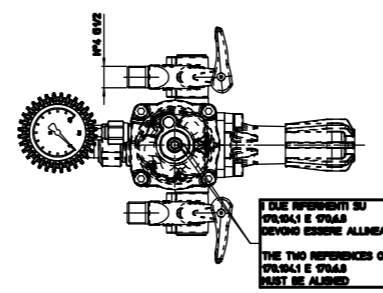


- 170.206.24
- 170.206.24 AM
- 170.206.24 K2
- 170.206.24 K3
- 170.206.24 NU
- 170.206.24 PM
- 170.206.24 RG
- 170.206.24 RP
- 170.206.24 SM
- 170.206.24 SR

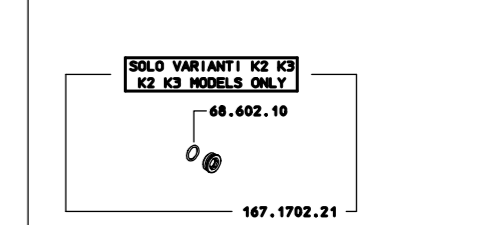

SCALA SCALE 1:1
DIREZIONE ASSEMBLAGGIO 401.1006.7
LUBRIFICARE CON GRASSO MOLY LT2 I
COMPONENTI SOGGETTI A SFREGAMENTO
E ROTAZIONE
ASSEMBLY DIRECTION FOR 401.1006.7
LUBRICATE WITH MOLY LT2 GREASE THE
COMPONENTS SUBJECTED TO RUBBING AND
ROTATION

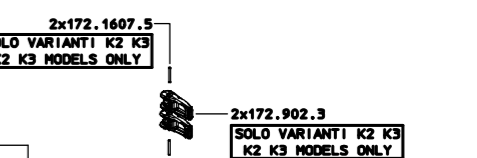

PER 172.1617.54
FOR 172.1617.54
COME SI ORDINA / HOW TO ORDER
Kit ricambio
Spare parts kit **172.302.61**

SOLO PER LOTTI DI PRODUZIONE < OTTOBRE 2023
ONLY FOR PRODUCTION BATCHES < OCTOBER 2023
COME SI ORDINA / HOW TO ORDER
Kit ricambio
Spare parts kit **170.302.30**

COME SI ORDINA / HOW TO ORDER
Kit ricambio
Spare parts kit **170.302.83**

