



170.215.22 — 

 — 4x

 — 4x

180.1506.26
BECHEM
HIGH LUB SW2

9.602.21
BECHEM
HIGH LUB SW2

170.6.8
BECHEM
HIGH LUB SW2

9.602.21
BECHEM
HIGH LUB SW2

170.602.111

[illegible]

170.1904.6

26.1902.20

LOVEALL, E. A. 1923

NON FORNITO CON VARIANTE NU
NOT SUPPLIED WITH NU MODEL



170.201.7

SOLO VARIANTI K1 M1
ASSEMBLARE CON LOXEAL 56-03
ORIENTARE VERSO SCARICO

K1 M1 MODELS ONLY
ASSEMBLE WITH LOXEAL 56-03
TOWARDS THE BACKFLOW

Diagram illustrating the assembly of a mechanical component, showing various parts and their specifications:

- Top Right:**
 - 4x170.1902.18
 - 16 ± 1 Nm
- Bottom Right:**
 - 9.801.6
 - 170.214.1 NERO BLACK
 - 9.301.7 LOXEAL 56-03 CON WITH 170.1902.16
- Center:**
 - 410.602.89
 - 401.7.8
- Left Side (Main Assembly):**
 - 202.1506.41
 - 401.1006.7
 - 170.202.14
 - 26.1902.20 LOXEAL 56-03 5 - 6 Nm CON WITH 170.202.14 401.1006.7 401.1609.7
 - 170.1608.1
 - 401.1003.44
 - 401.1609.7
 - 170.1603.43 LOXEAL 56-03 5 - 6 Nm CON BATTUTA/UP TO BEAT
- Bottom Center:**
 - 410.602.89
- Bottom Right (Assembly Note):**

SCALA SCALE 1:1
 DIREZIONE ASSEMBLAGGIO 401.1006.7
 LUBRIFICARE CON GRASSO MOLY LT2 I COMPONENTI SOGGETTI A SFREGAMENTO E ROTAZIONE
 ASSEMBLY DIRECTION FOR 401.1006.7
 LUBRICATE WITH MOLY LT2 GREASE THE COMPONENTS SUBJECTED TO RUBBING AND ROTATION

SCALA SCALE 1:1
DIREZIONE ASSEMBLAGGIO 401.1006.7
LUBRIFICARE CON GRASSO MOLY LT2 I
COMPONENTI SOGGETTI A SFREGAMENTO
E ROTAZIONE

ASSEMBLY DIRECTION FOR 401.1006.7
LUBRICATE WITH MOLY LT2 GREASE THE
COMPONENTS SUBJECTED TO RUBBING AND
ROTATION

NON FORNITO CON VARIANT
K1 KA KM KP KR
NOT SUPPLIED WITH
K1 KA KM KP KR MODELS

170.201.6
LOXEAL 56-03



SOLO VARIANTI K1 KA KM KP KR
K1 KA KM KP KR MODELS ONLY

180.602.30

200.1101.18

2x172.1607.5

SOLO VARIANTI K1 KA KM KP KR
K1 KA KM KP KR MODELS ONLY



SOLO VARIANTI K1 KA KM KP KR
K1 KA KM KP KR MODELS ONLY

68.602.10

167.1702.21

PER 172.1617.54
FOR 172.1617.54
COME SI ORDINA / HOW TO ORDER
Kit ricambio
Spare parts kit **172.302.61**

SOLO PER LOTTI DI PRODUZIONE < OTTOBRE 2023
ONLY FOR PRODUCTION BATCHES < OCTOBER 2023
COME SI ORDINA / HOW TO ORDER
Kit ricambio
Spare parts kit **170.302.30**

COME SI ORDINA / HOW TO ORDER
Kit ricambio **170 302 83**
Spese poste kit

DESCRIZIONE: COMANDO M170 OTC		N°revisione 09	Data revisione 11/08/2025
 Braglia enrl Tel. +39 0522 340648 Fax. +39 0522 345025 41022 REGGIO EMILIA - ITALY - UE Email tecnic@braglia.it	DISEGNATO	APPROVATO	Dis.N°/Codice 170.206.23
	G.BRAGLIA	G.BRAGLIA	

— 68.602,10

167.1702.2

$$2 \times 172.902.3 =$$

SOLO VARIANTI K1 KA KM KP KR
K1 KA KM KP KR MODELS ONLY

—2x172.1607.5

SOLO VARIANTI	K1	KA	KM	KP	KR
---------------	----	----	----	----	----

K1 KA KM KP KR MODELS ONLY

SOLO VARIANTI K1 KA KM KP KR
K1 KA KM KP KR MODELS ONLY

180 103

- 200.1101.18 -

NON FORNITO CON VARIANTI NU SM SR
[NOT SUPPLIED WITH NU SM SR MODELS]



— 170.1005.15

SOLO VARIANTE K1
ASSEMBLARE CON LOXEAL 56-03
SU 170.215.22
K1 MODEL ONLY
ASSEMBLE WITH LOXEAL 56-03
ON 170.215.22

SOLO VARIANTE M1
ASSEMBLARE SU 709.1504.59
M1 MODEL ONLY
ASSEMBLE ON 709.1504.59

SOLO VARIANTI KM KP PM RP
KM KP PM RP MODELS ONLY

TUTTE LE VARIANTI _____
ALL MODELS

170.1012.5
MANUALE M170 OTC