

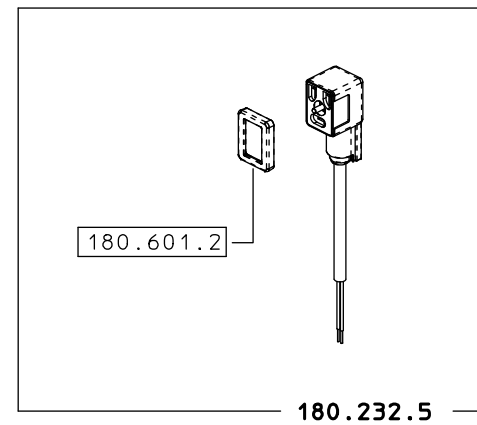
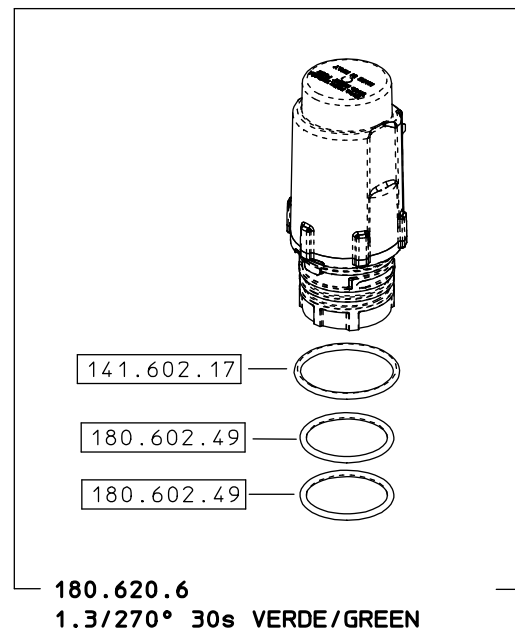


180.1910.10


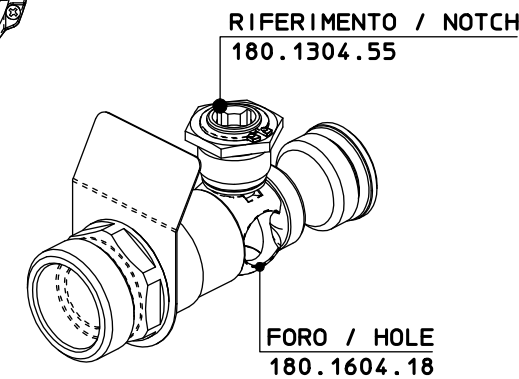


POSIZIONE DI PARTENZA 180.620.6
180.620.6 STARTING POSITION
SCALA/SCALE 1:1

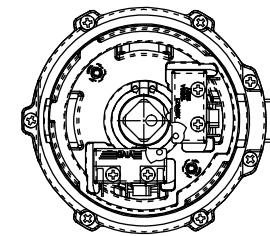

POSIZIONE DI ASSEMBLAGGIO 180.1604.18
E 180.1304.55 NEL 180.107.79 - SCALA 1:1

180.1604.18 AND 180.1304.55 ASSEMBLING
POSITION INSIDE 180.107.79 - SCALE 1:1

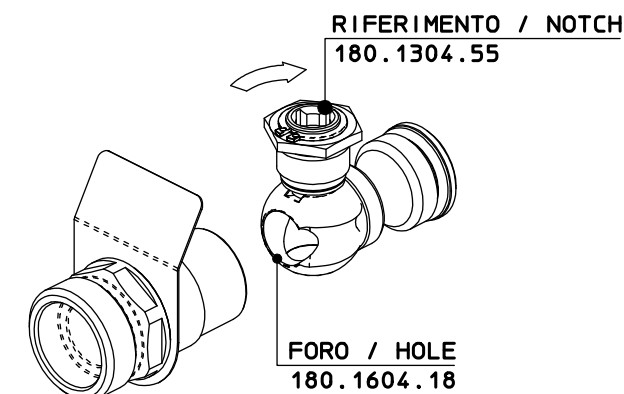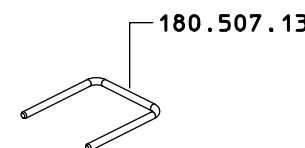


POSIZIONE DI PARTENZA 180.1604.18 E 180.1304.55
PER MONTAGGIO 180.620.6 - SCALA 1:1


180.1604.18 AND 180.1304.55 STARTING POSITION
FOR 180.620.6 ASSEMBLING - SCALE 1:1

Per innestare 180.620.6 ruotare 180.1304.55
5°/10° dalla posizione di partenza nel verso
indicato dalla freccia

To engage 180.620.6 rotate 180.1304.55 from
starting position 5°/10° in the arrow direction

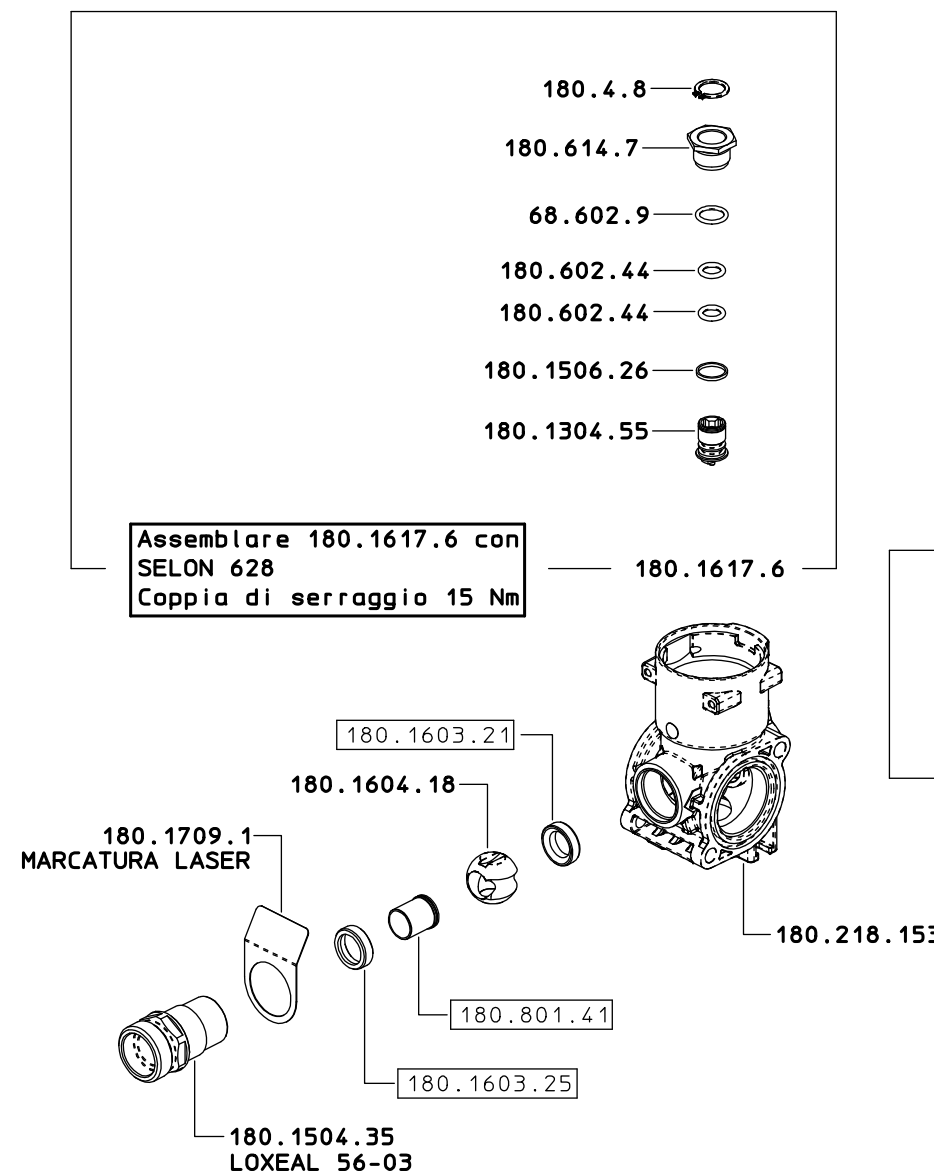

SOLO PER KIT
FOR KIT ONLY

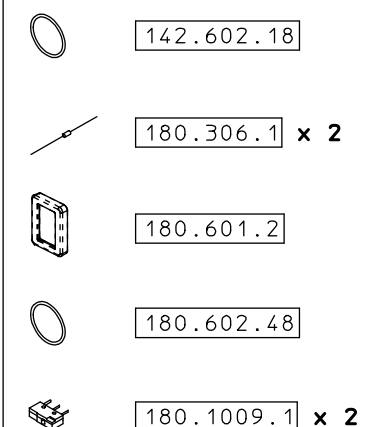

COME SI ORDINA / HOW TO ORDER

Kit ricambio
Spare parts kit **180.302.33**